

ROVIR Q R G

The ROVIR has 3 modes – PTZ, SET, and IMG.

The thumbstick will perform the corresponding functions below.



SWITCH MODE – Press and hold the C button for more than 1 second.

ZOOM – Press the C button for less than one second.

STANDBY – Press and hold the C and Z button for more than 1 second.

NUC – Press the C and Z button for less than one second.

POLARITY – Press the Z button for less than one second.

RECORD – Press and hold the Z button for more than one second.

MOTOR SPEED – Press the Z button twice for less than $\frac{1}{4}$ of a second.

DIRECTIONAL INDICATOR – If the directional indicator needs to be reset turn the ROVIR facing forwards and press the C button 5 times in a row for less than $\frac{1}{4}$ second, then press the Z button one time for less than $\frac{1}{4}$ second. The directional indicator will then reset to the 12 o'clock position.