

MUM INTERFACE SLIDER SET M-CLIPS OVERVIEW

M-CLIP HELMET INTERFACE SET

- 1

 - The M-Clips are designed for use as an adapter component onto the legacy MUM interface plate, while mounted aboard the HYPER MUM.
 - M-Clips are NOT designed for use with any other legacy (plastic) MUM type products.
 - DO NOT use the M-Clips for weapon use, co-sighting or other non-helmet or non-monocular/biocular applications.




- The M-Clips are provided as a pair (opposing set) with a definitive top/bottom to compensate for the HYPER MUM centerline offset.
- Loosening the main set screw allows the M-Clip raceway to slide over the MUM interface plate. Snug down the set screw over the plate recess hole. DO NOT OVER TIGHTEN the M-Clip set screw.
- Ensure the HYPER MUM uses the provided screw hardware, NOT any OEM or legacy fasteners. If older and less secure screws are used, the M-Clip could detach resulting in a lost/broken device.

- 3

- M-Clips are not available individually, only as a mated pair.
- M-Clips are designed as a fast-attach modular component, allowing the continued situational use alongside legacy accessories.
- M-Clips can be used as a pair on a single device, or split use with a single adapter on separate devices.

- 5

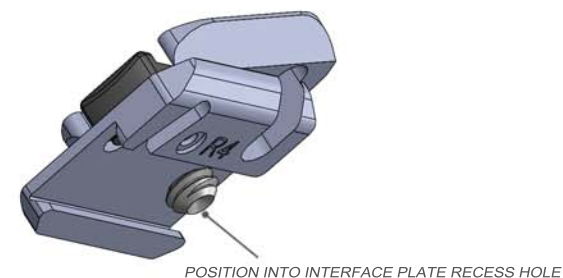

NOTE: BOTH THE TOP/BOTTOM M-CLIP (SOLD AS A SET) ARE EQUIPPED WITH AN ADJUSTABLE TOOTH IN THE REAR. THIS USER ADJUSTABLE SLIDER WILL ADJUST FOR WEAR/TEMPERATURE TOLERANCE ISSUES WHEN USING VARIOUS COMPONENTS SUCH AS WEAPON OR HELMET MOUNT SYSTEMS.

NOTE: EITHER SHOE INTERFACE INDICATED ABOVE MAY BE USED FOR HELMET USE. NEITHER M-CLIP SHOE IS DESIGNED FOR USE AS A WEAPON INTERFACE POINT IN ANY CAPACITY. THE LEGACY MUM ACCESSORIES MAY BE USED IN CONJUNCTION WITH ABOVE ITEMS.